 


# Router Installation Guide

## Huawei AR169

### Box Contents


- Huawei AR169 Router
- Power cable
- RJ45 Ethernet Cable and / or RJ11 Cable
- Mounting Brackets

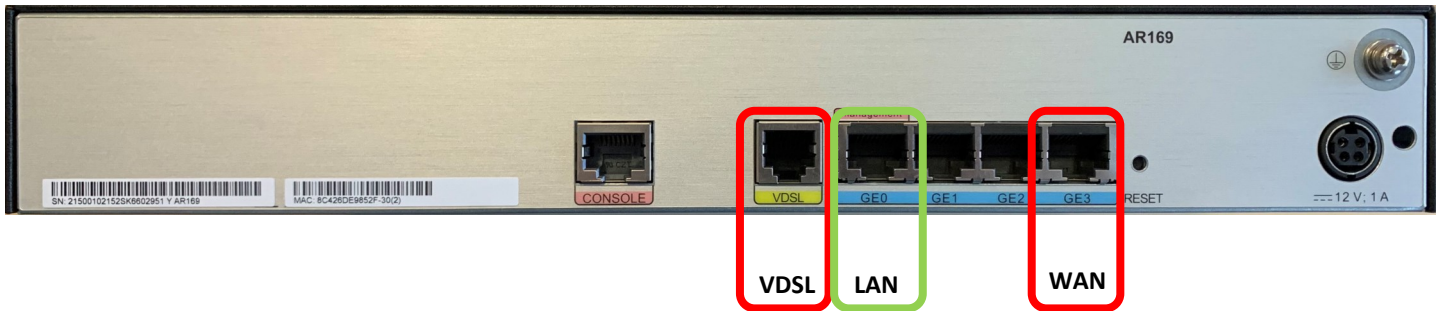

### Step 1: Position and Connect the Router

Position the router close enough to the supplier provided Network Termination Equipment (NTE) so that the provided Ethernet and RJ11 cabling will reach the supplier's downlink port and broadband socket. Connect the provided Ethernet cabling from the **GE3** port on the router to the appropriate downlink port pictured below, and the RJ11 cabling from the **VDSL** port to the broadband socket.


Virgin Media Upto 100M

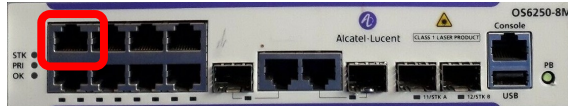

Virgin Media Over 100M



Vodafone

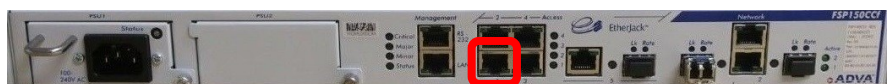

TalkTalk and BT



### Step 2: Power the Router

Connect power to the router. The device will take several minutes to fully power up and establish a link to the NTE. Once a link to the NTE has been established, the router will begin the process of downloading and applying your service specific configuration. During this process, the router will reboot itself. If you powered the router on before connecting to the NTE, please reboot the router whilst connected to the NTE. The automatic configuration and subsequent router reboot can take up to 30 minutes to complete.

### Step 3: Connecting the LAN

Connect the customer LAN to the **GE0** port on the router. You will need to configure this LAN to use the public IP address range, provided to you separately on your service handover document. Once the LAN has been successfully connected to the router and a network or device using the assigned subnet has been configured, the service is ready to use.